



## PNT 500 Wireless Handheld Display

The PNT 500 Hand Held Display allows you to remotely view the scale indicator information. The PNT 501 RF transmitter connects to the RS-232 port on the PNT 9700-series indicators and transmits the data to the PNT 500 Wireless Handheld Display.

Do you load your own logs?  
The RF remote display will allow you to monitor the truck's weight from your seat in the loader.

No longer will you need to climb down from the loader to look at your 9700 indicator in the truck cab.



### PNT 500 Wireless Handheld Display:

- 2 X 16 Dot Matrix LCD display with backlight
- User scan PNT 501-TX ID number
- Gross, Net, Load/Deliver modes
- Units can be displayed in pounds or kilograms
- Auto-off mode - programmable 5, 10, 20, 30 minutes
- Can operate over 30 hours on 2 AA batteries
- ABS plastic body and molded rubber sides

#### Dimensions:

- 3.13"h x 4.82"w x 1.32"d

### PNT 501 RF Transmitter:

- 10ft shielded cable, polyurethane jacketed
- ABS plastic
- Environmentally sealed

#### Dimensions:

- 2.56"h x 4.53"w x 1.57"d

